


# LOCK'ER DOWN ELECTRONIC LOCK INSTRUCTIONS Touch Keypad – D153 (USER MANUAL)



REMOVE PROTECTIVE FILM FROM KEYPAD

## Introduction

- Comes with a touch screen keypad, with 1-15 digit codes setting availability, providing billions of combination possibilities.
- User codes are saved upon power off, providing security of code upon battery replacement.
- Instant unlock upon code entering.
- Auto alarm upon 4 wrong entries
- Powered by patent button-cell battery, integrated type designed, no accessory connected, easy installation.
- Battery usable for 1 year, with automatic low battery warning.
- Private function for your safe to create a unique code for your own personal use.

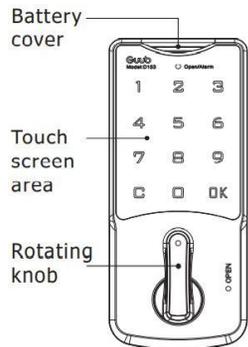

## Lock User Information

- Each lock comes with a CR 2032 battery as the power source, which can be replaced by the user whenever necessary. The diagram below explains the **LOCATION** of the battery compartment on the Electronic Lock.



**NOTE:** When inserting the battery compartment, make sure **+** faces downward

- To replace the battery, simply:
  - Remove the battery compartment at the **BACK** of the lock.
  - Replace the current battery with a new **CR 2032** battery.
  - Reinsert the battery and battery compartment into the battery compartment location at the back of the lock.
  - Once removed, the LED indicator will light up and a **"BEEP"** will be heard upon key pressing.

- Each lock also comes with a factory reset code. This is so that the lock can be re-opened if the unique user code that was input upon installation is either misplaced or forgotten.

- In order to get the factory reset code, you **MUST CALL** Lock'er Down first, and provide the unique PIN number for your electronic lock so that we can find the locks individual reset code in our database.
  - The images below show an example of what the unique PIN looks like, as well as its location of the side of the lock. The PIN is written upside-down for easier readability post-installation.




## User Function

### 1) Unlock and Lock

- The factory default code is set to **12345678**

Unlock by keying in the factory default code, then pressing OK, then turning the lock knob clockwise.

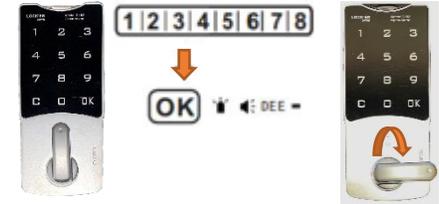

Lock by turning the knob counterclockwise until the nob is set back to its original position.



### 2) Set Code

- To change the factory code to your preferred code, simply:
  - key in the factory code
  - press **"C"**
  - Key in **your preferred code**
  - Then press **"OK"**

